



**ELEVATING
SAFETY
TOGETHER**

CRANECAMERA

4-PIN CONNECTOR GUIDE

MALE + FEMALE




For direct support:


 service@cranecamera.eu

 www.cranecamera.eu

Office:


 +31 33 466 8938

24/7 Service:

 +31 6 159 561 05

Step 1:

- Slide the end swivel, the waterproof rubber ring, and the middle section of the connector over the cable.
- Cut and remove the outer cable housing around **3.5cm** from the end.
- Cut the red and yellow cable around 1cm from the end.
- Fully cut the outer coaxial cable and black cable. Twist the inner black cable and outer shield of the coaxial cable together.
- Cut the inner coaxial cable approximately 1 cm from the end, and fold it back over its white shield.

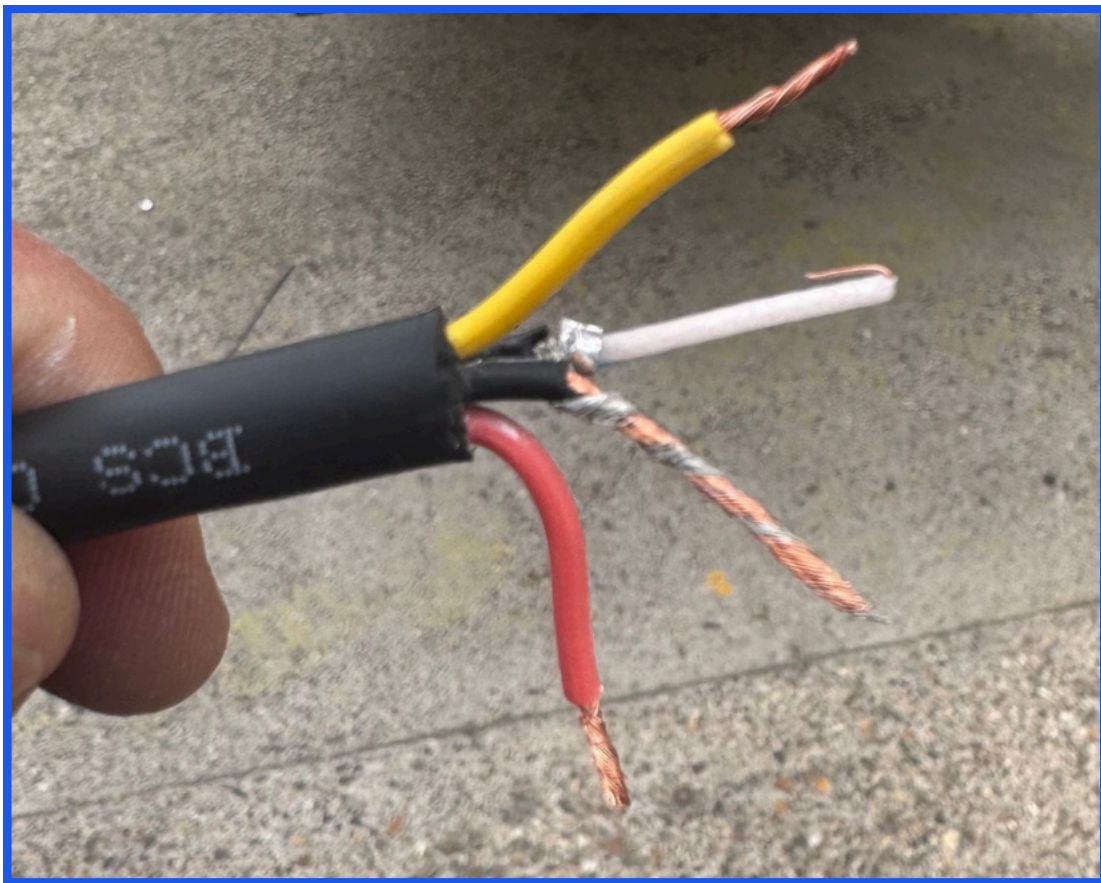


Step 2:

- Use cable ends and mount them to the ends of the cables.



Step 3:

- Insert the cable ends into the correct input of the male or female 4-pin connector.
 - Pin GND = Black + Coaxial shield
 - Pin 1 = Red (+12/24V)
 - Pin 2 = Coaxial core (Video)
 - Pin 3 = Yellow (Data signal)
- Screw tight, except for the coaxial core (pin 2). Do not screw this too tight, it might break the coaxial core cable. Tighten it until it feels correct.

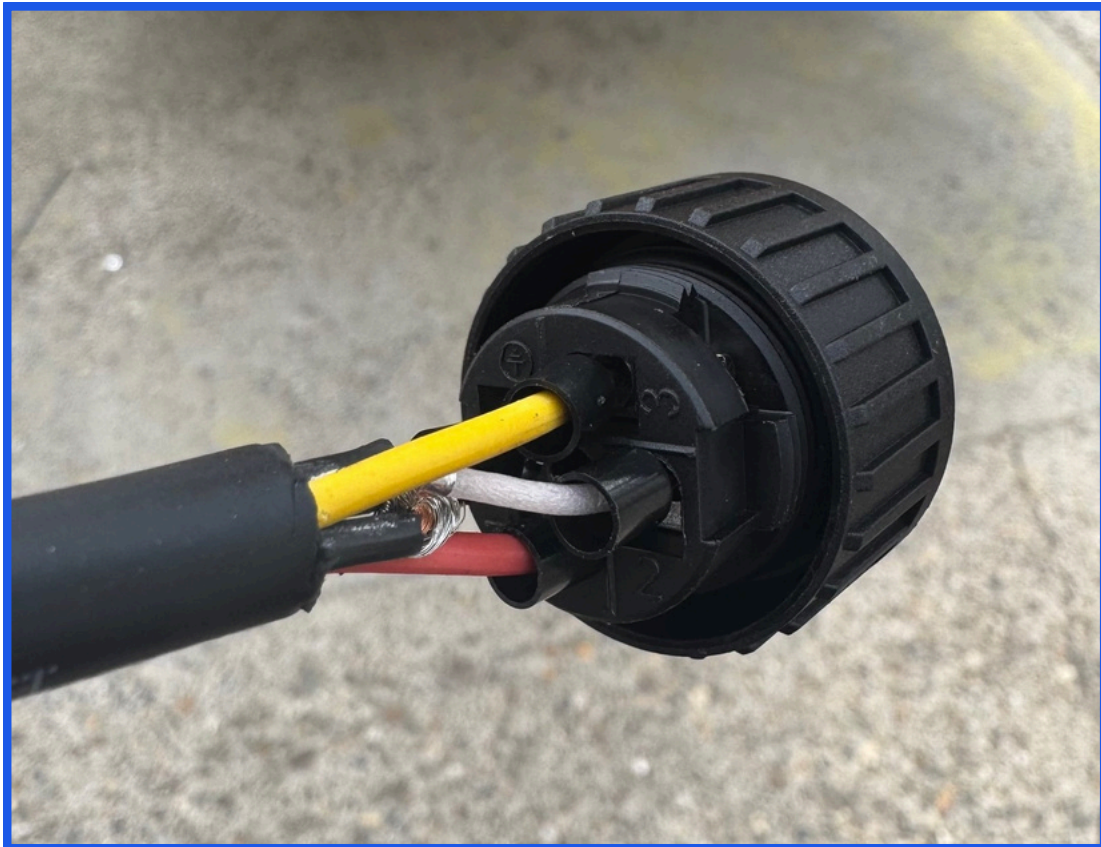

Step 4:

- Move the middle section and rubber ring towards the connector end and use pliers to hold the end and screw the middle section tight.



Step 5:

- Move the swivel towards the connector and use pliers to hold the end and screw the swivel tight so the rubber ring will make a water resistant seal.

